


SUGGESTIONS

For Installation and Use of Chevrolet Side Mount,
Fender Well Equipment Spare Tire Lock.

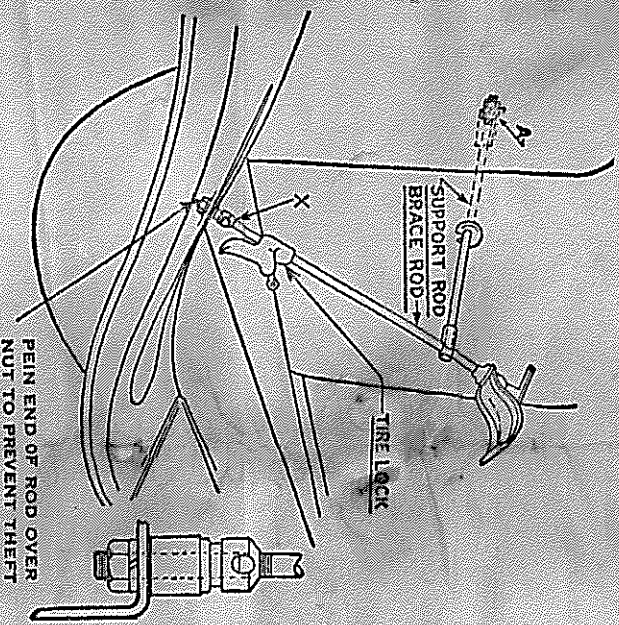

Loosen Nuts at "A" so that support rod can be unscrewed until the pointed outer end disengages from brace rod.

Remove nut from lower end of brace rod (underneath fender).

Lift brace rod from fender and remove the remaining nut.

Remove the special nut from the tire lock. Slip the tire lock in place on the brace rod and screw the special nut in position at "X". Turn the support rod until the pointed end is securely seated in the notch in brace rod. Proper position of the carrier can then be obtained by adjusting and tightening the nuts at "A" and the brace rod lockwasher and nut underneath the fender.

IMPORTANT

When installing lock in connection with wire wheels the spacer furnished should be installed under locking nut as shown. Spacer to be discarded when lock is used with rim and tire only.