


## 1931 CHEVROLET FIREWALL HOLES

by Ian Murray

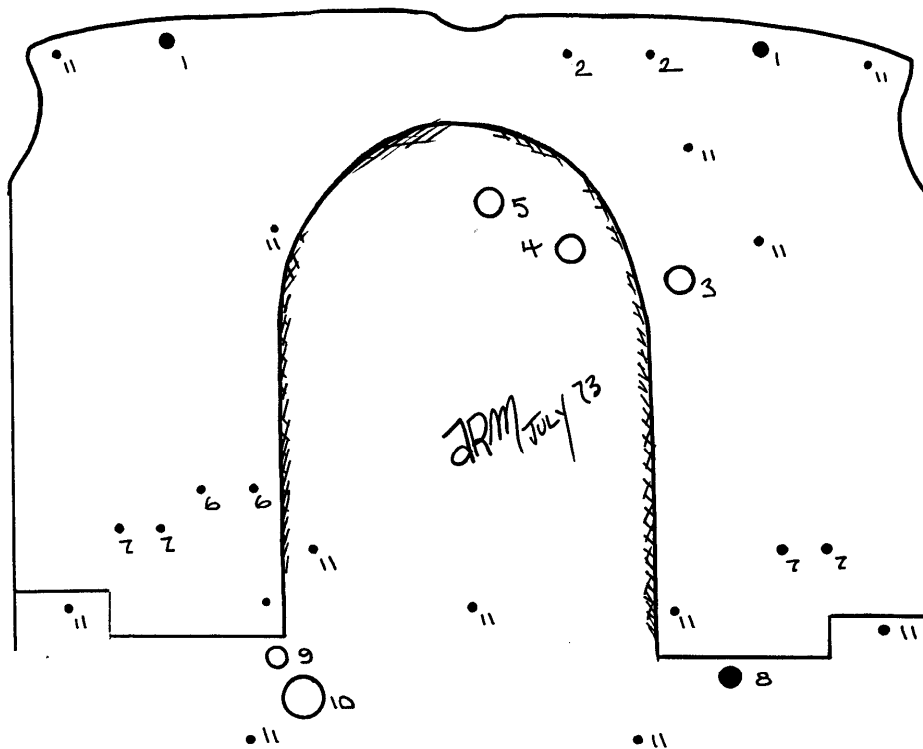

1. (2 OF THESE) RADIATOR SUPPORT RODS.
2. (2) MANUFACTURES'S NAME PLATE.
3. (1) WIPER HOSE.
4. (1) OIL GAUGE TUBE.
5. (1) WATER TEMPERATURE INDICATOR TUBE.
6. (2) MOUNTING OF COIL - MOUNT IT TERMINALS DOWN.
7. (4) IF SPORT MODEL, SIDEMOUNT BRACES ATTACH INSIDE HERE.
8. (1) CHOKE AND THROTTLE CABLES.
9. (1) BOTH COIL WIRES, AND WIRE FROM STARTING SWITCH.
10. (1) ELECTROLOCK CABLE, AND SPARK CABLE.
11. (12 OR SO) MOUNTING OF FIREWALL INSIDE MAT, BY STOVE BOLTS, AND SQUARE NUTS.  
SOMETIMES CLIPS ON INSIDE HOLD WIRES OR CABLES AS WELL.